SCOSCHE®

TA2042B

2003-UP TOYOTA 4-RUNNER VEHICLES WITH RDS RADIOS

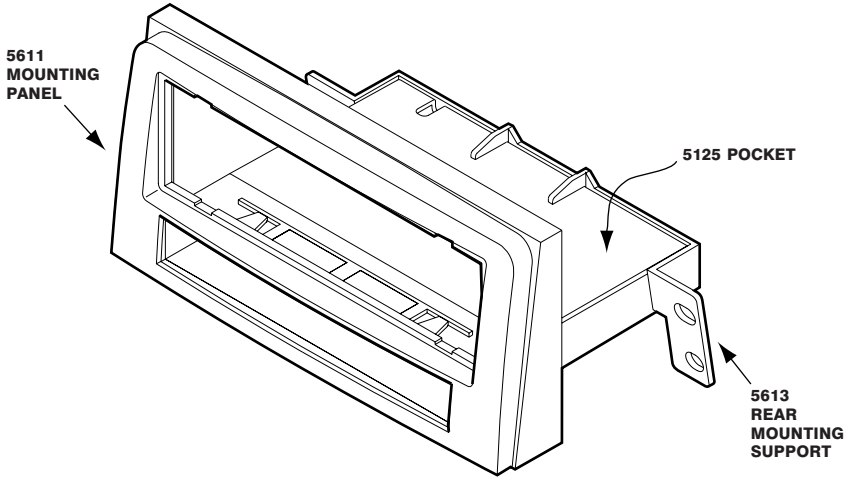

STEREO INSTALLATION

RADIO REMOVAL

NOTE: The factory radio provision is for a DIN and half sized radio.

1. Remove top of the center console by prying upwards.
2. Remove sides of center console by prying upwards.
3. Remove lower dash panel below steering column. Extract one (1) 10mm bolt from lower right hand side.
4. Remove one (1) 10mm Phillips head screw from inside pocket below A/C controls.
5. Remove A/C controls by pulling towards you. Extract two (2) 10mm bolts behind A/C controls.
6. Pull dash trim bezel surrounding radio and pocket by pulling towards you. Disconnect all plugs and remove.
7. Remove two (2) 10mm bolts securing radio brackets to dash. Disconnect and remove radio.

Thank you for purchasing the Scosche TA2042B Kit. This kit was manufactured with the highest of quality standards.

NOTES:

- See your vehicle's instructions for any special tools your installation might require.
- Read all instructions accompanying your car stereo/cassette player for proper wiring and mounting instructions.

WIRE CODES

For Factory Wiring Codes go to: www.scosche-cars.com

LIABILITY DISCLAIMER

This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/codes and information pertaining to installation of this kit in the listed vehicles. Manufacturer cannot be held responsible for discrepancies/inconsistencies that may occur due to the automobile manufacturing changes or options, or damage that may occur in the automobile during the installation of components while using this booklet.

If you have any further questions call: **TECH HELP 1-800-621-3695x3**

© 2004 SCOSCHE INDUSTRIES, INC.

SI 4/04-TA2042B (3000003)

SCOSCHE®

TA2042B

2003-UP TOYOTA 4-RUNNER VEHICLES WITH RDS RADIOS

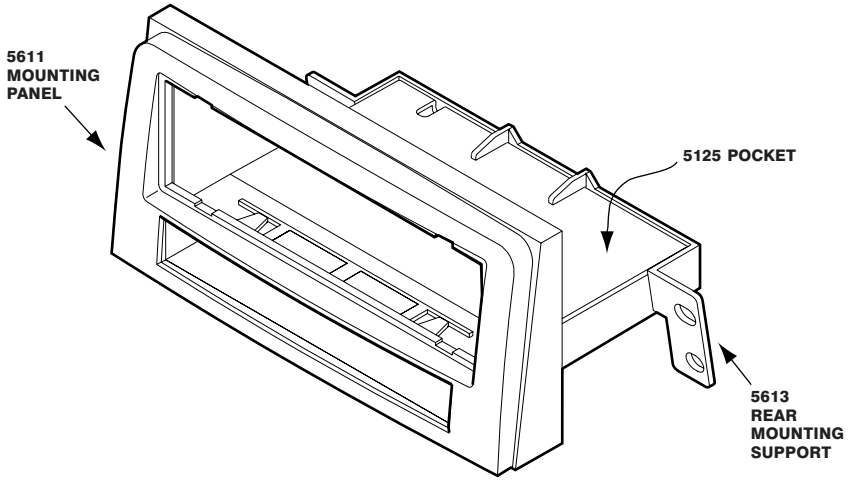

STEREO INSTALLATION

RADIO REMOVAL

NOTE: The factory radio provision is for a DIN and half sized radio.

1. Remove top of the center console by prying upwards.
2. Remove sides of center console by prying upwards.
3. Remove lower dash panel below steering column. Extract one (1) 10mm bolt from lower right hand side.
4. Remove one (1) 10mm Phillips head screw from inside pocket below A/C controls.
5. Remove A/C controls by pulling towards you. Extract two (2) 10mm bolts behind A/C controls.
6. Pull dash trim bezel surrounding radio and pocket by pulling towards you. Disconnect all plugs and remove.
7. Remove two (2) 10mm bolts securing radio brackets to dash. Disconnect and remove radio.

Thank you for purchasing the Scosche TA2042B Kit. This kit was manufactured with the highest of quality standards.

NOTES:

- See your vehicle's instructions for any special tools your installation might require.
- Read all instructions accompanying your car stereo/cassette player for proper wiring and mounting instructions.

WIRE CODES

For Factory Wiring Codes go to: www.scosche-cars.com

LIABILITY DISCLAIMER

This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/codes and information pertaining to installation of this kit in the listed vehicles. Manufacturer cannot be held responsible for discrepancies/inconsistencies that may occur due to the automobile manufacturing changes or options, or damage that may occur in the automobile during the installation of components while using this booklet.

If you have any further questions call: TECH HELP 1-800-621-3695x3

© 2004 SCOSCHE INDUSTRIES, INC.

SI 4/04-TA2042B (3000003)